



Contemporary  
Lighting™





# Installation Instructions

## Model E23146-10PC

1. Turn breaker off on outlet where fixture will be installed
2. Remove mounting bracket from fixture and install to electrical box
3. Identify wires ( wires have a strand of color within )  
Clear wire is Neutal  
Black wire is Live  
Green wire is Ground
4. Wire fixture to wires in outlet box
5. Carefully remove Packaging from fixture
6. Install fixture to bracket and tighten cap nuts so that fixture meets the ceiling
7. Remove protective coating from inner pan
8. Install inner crystal strings to metal loops on bottom of pan per diagram below.  
It is recomended to use the gloves included and not to touch crystal with bare fingers
9. Install 40 watt G9 xenon bulbs by gently pushing into socket

(Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 min before handling)

**WARNING:** These wires are support cables and should not be connected to electricity source

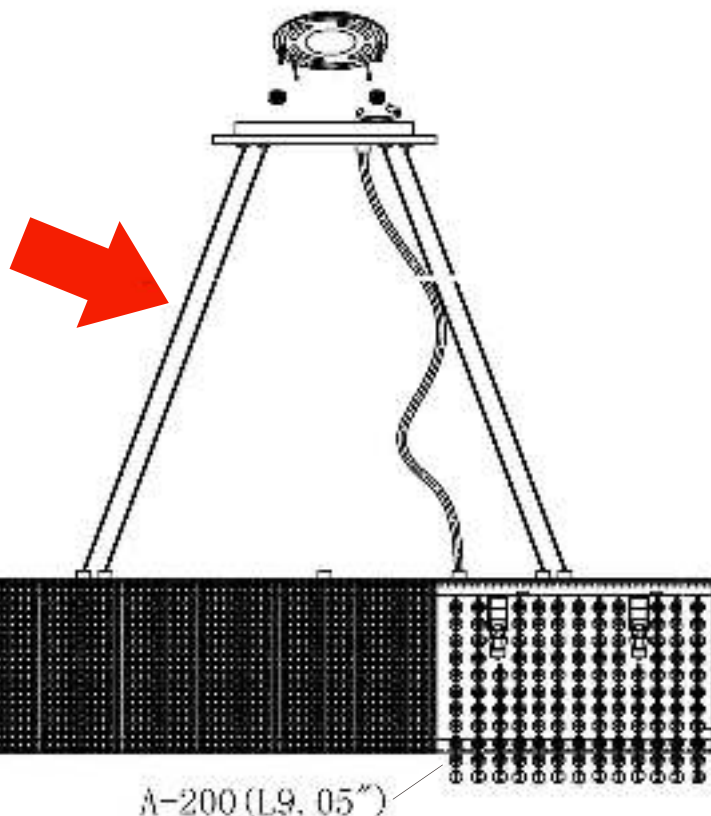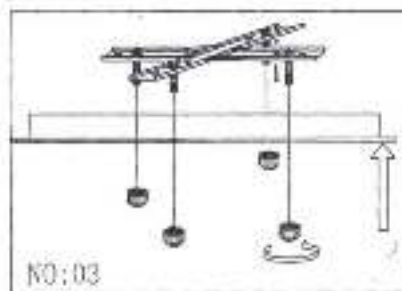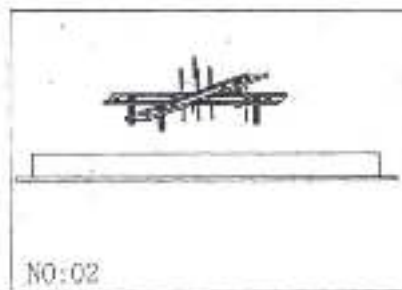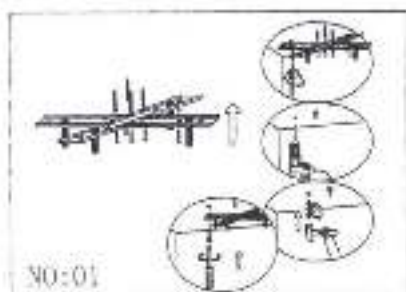

A-200 (L9.05")

