

INSTALLATION INSTRUCTIONS

Item #4999-271 (05/08/2014)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.2)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the existing fixture and its mounting hardware from the ceiling.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Thread loop (J) onto the nipple of the fixture body until tight.
4. Spread the fixture arms open so that they are evenly spaced.

HANGING THE FIXTURE (Fig.1)

IMPORTANT: For a safe and secure installation, this fixture must be installed by means of support that is independent of the outlet box.

SUGGESTED INSTALLATION:

5. Provide a 1/4" IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet box.
6. Assemble the ceiling loop, nipple, hex nuts and hickey to the center 1/4" IPS support pipe and adjust the overall length to allow the lock collar to hold the canopy flush to the ceiling. When the adjustments have been completed, secure the three hex nuts.
7. Open one lock link and connect one end link of the chain to the fixture loop (J). Then thread the lock link closed.
8. By measuring, determine the correct number of chain links needed for the desired hanging height. Use a pair of chain pliers to disconnect and discard the remaining chain.
9. Carefully lace the fixture wires and safety cable through the chain and pull tight.
10. Slip the lock collar and canopy over the chain. Allowing them to rest on the fixture loop (J).
11. Attach the other end link of the chain to the ceiling loop.
12. Feed the fixture wires and safety cable through the ceiling loop, and nipple and allow them to exit through the side of the hickey.
13. Tie off the set screw assembly as shown. Run the safety cable through the top of the outlet box and secure to a structural member.

CONNECTING THE WIRES (Fig.3)

14. Connect the electrical wires as shown in (Fig.3), making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. After wires are connected, tuck them carefully into the ceiling outlet box.
15. Raise the canopy all the way to the ceiling. Then raise the loop collar and thread onto the ceiling loop protruding through the canopy.

FINISHING THE INSTALLATION (Fig.2)

16. Place crystal cap (M) and glass shades (N) over sockets.
17. Place cap (P) over the socket and secure with socket ring (Q) using the wrench (provided).
18. Install the light bulb (s) in accordance with the fixtures specifications. (DO NOT EXCEED THE MAXIMUM WATTAGE RATING) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)
19. Thread decorative bulb covers (R) onto the sockets. (Note: bulb cover (R) to be used with Xenon bulbs only, not intended for use with Halogen bulbs.)

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration on this manual is for installation purposes only. It may or may not be identical to the fixture purchased. Do not clean your light fixture or parts with water or cleanser.

Fig. 1

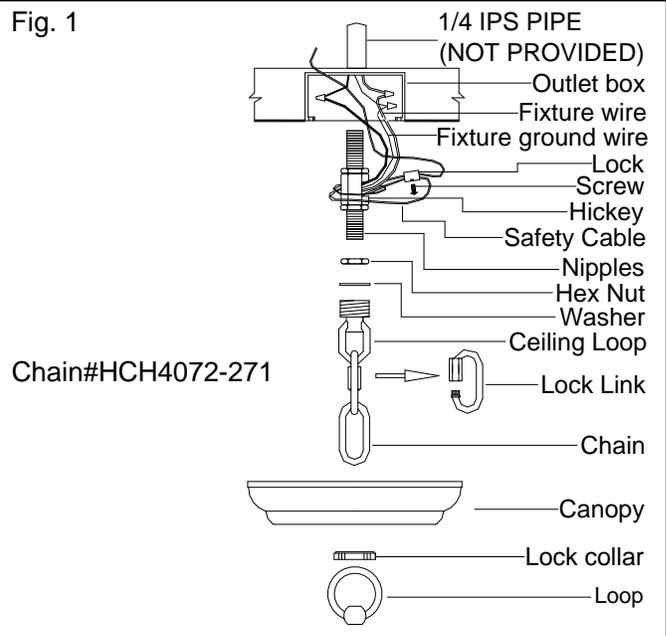


Fig. 2


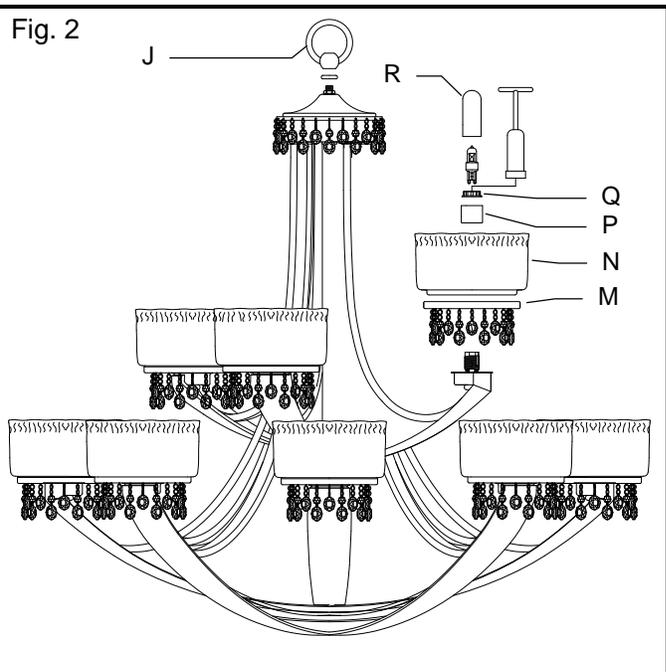


Fig.3



CHAIN HUNG FIXTURE INSTRUCTION

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

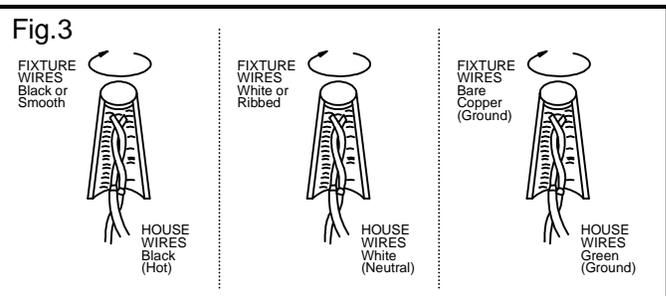