

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (4) B10 Candelabra Base Bulbs 60W Maximum

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

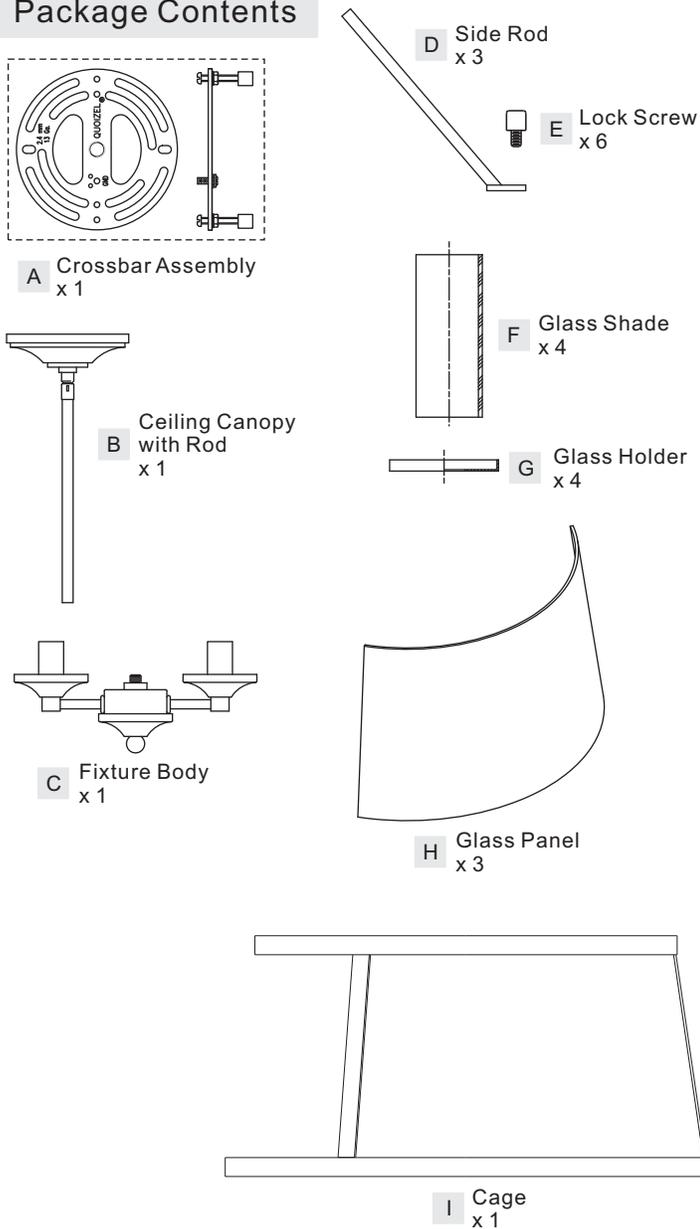


STEP 1 – Install Glass Panels

- A. Place the Cage (I) onto a flat working surface with the bottom edge on the top. Carefully insert the narrow edge of Glass Panel (H) into the slot of the Cage (I). Attach the Glass Panel (H) to the Cage (I) and secure by folding the tabs in the bottom edge of the Cage (I) to the Glass Panel (H).
- B. Repeat the process to complete the installation of other Glass Panels (H).

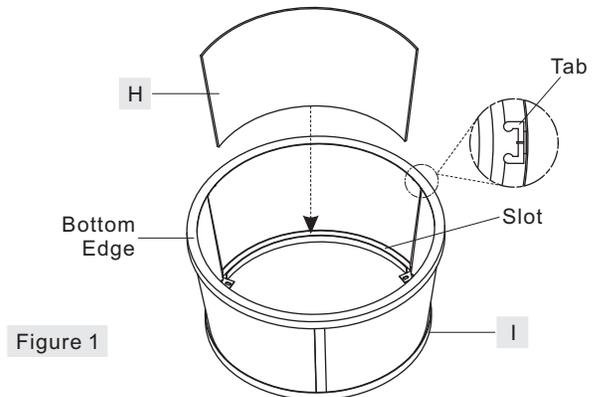

STEP 2 – Install Ceiling Canopy with Rod to Fixture Body


- A. Thread the Ceiling Canopy with Rod (B) to the Fixture Body (C) and hand tighten until snug.

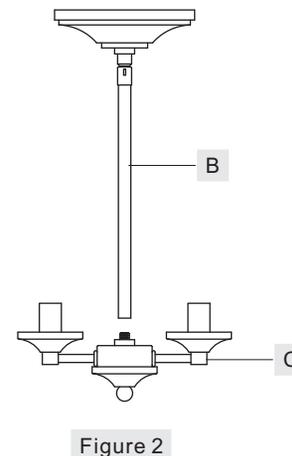

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com


STEP 3 - Install Ceiling Canopy Assembly, Side Rods and Cage

- Attach the top end of the Side Rod (D) to the side hole on the ceiling canopy and secure with Lock Screws (E). Hand tighten until snug.
- Place the tab at the bottom end of the Side Rod (D) under the tab on the top edge of the Cage (I). Place the Lock Screw (E) through the hole on the top edge of the Cage (I) and thread it into the tab on the bottom end of the Side Rod (D). Hand tighten until snug.

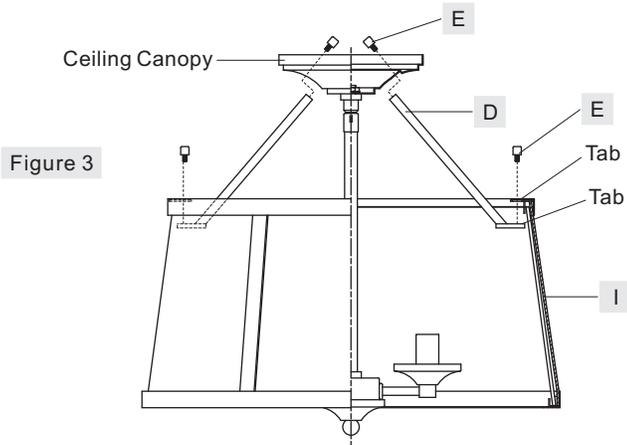


STEP 4 - Installing the Crossbar Assembly

- Pass the supply wires and ground wire from outlet box through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (A) with Outlet Box Screws (not included). Tighten until snug.

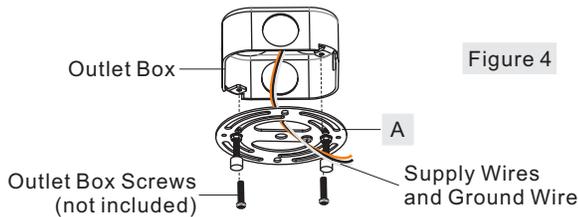


STEP 5 - Test Fitting Ceiling Canopy to Crossbar Assembly

- Remove mounting balls from the Crossbar Assembly (A). Fit the ceiling canopy to the Crossbar Assembly (A) and secure with mounting balls. Note: The ceiling canopy should be snug against the ceiling and the mounting balls. If not, adjust the length of the nipple on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the ceiling canopy is secure, remove the mounting ball and ceiling canopy and proceed to Step 6.

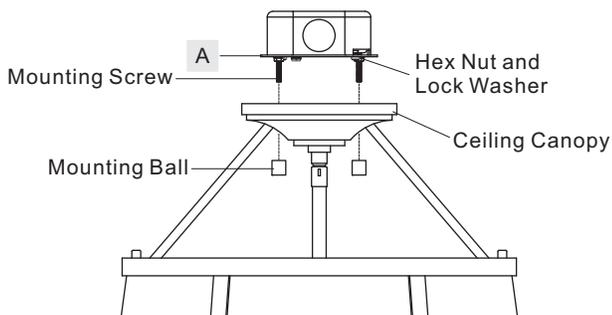


STEP 6 - Wire Connections

- Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

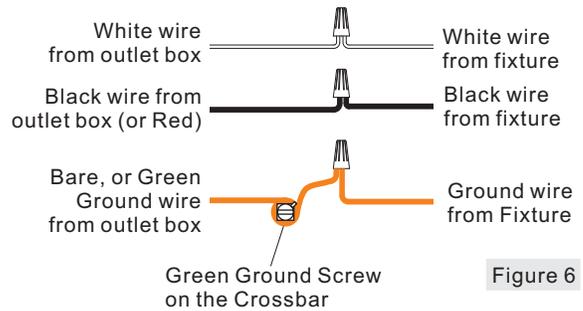

STEP 7 - Install the Fixture


- Carefully tuck all wires into the outlet box and position the ceiling canopy over the outlet box. Align the holes in the ceiling canopy with the mounting screws, then attach the ceiling canopy using the previously removed mounting balls. Hand tighten until snug.

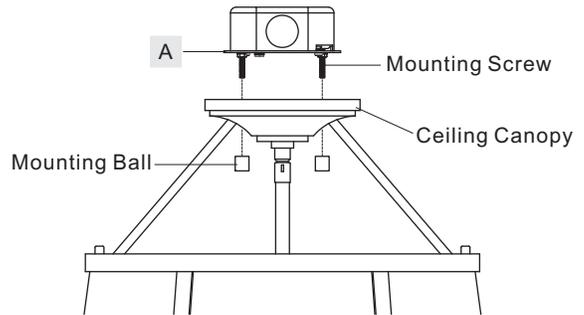

STEP 8 - Install Glass Holders, Bulbs and Glass Shades

- Place Glass Holders (G) over sockets with the opening on the top.
- Insert bulbs onto sockets and screw snugly into place.
- Place Glass Shade (F) over bulbs onto Glass Holders (G).

Your fixture is now assembled and ready to use. Enjoy!



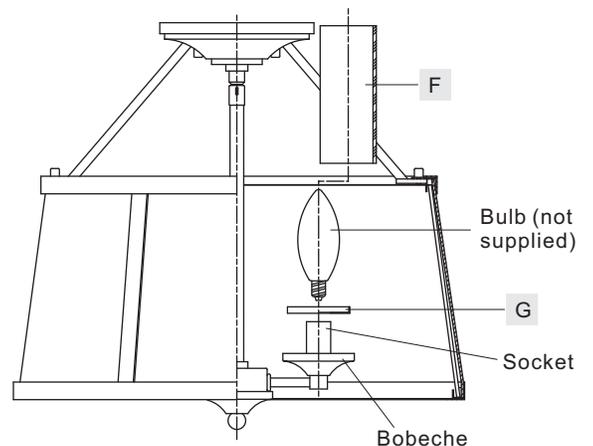


Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoise.com

BAW1716PK

FINISH: POLISHED NICKEL

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

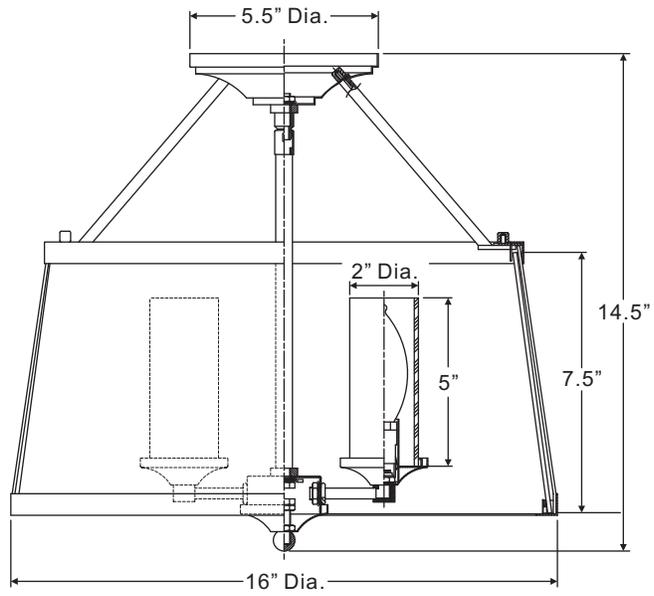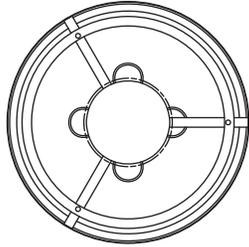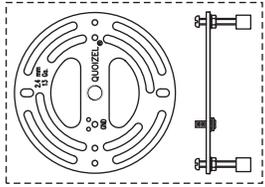

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com