

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (5) Medium Base Vintage 60W Bulbs (supplied), Maximum 100W.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

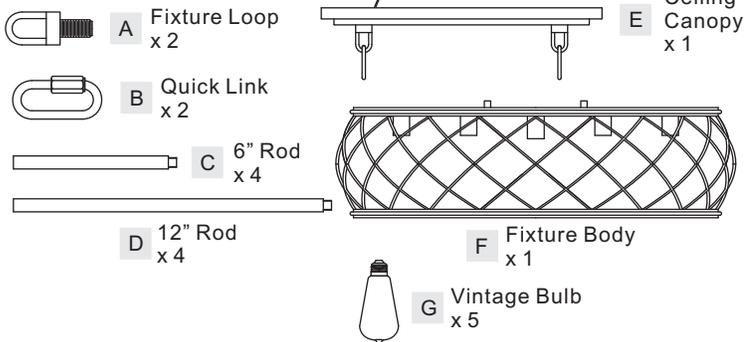


(Step 1 Continued)

B. Pass the supply wires and ground wire through the chosen rods (C/D) and the Fixture Loop (A). Thread the Fixture Body (F), the chosen Rods (C/D) and the Fixture Loop (A) together. Hand tighten until snug.


Suggested rods for Ceiling height:
8' ceiling: use (1) 6" rod and (1) 12" rod
9' ceiling: use (1) 6" rod and (2) 12" rods
10' ceiling: use (2) 6" rods and (2) 12" rods

Hardware Contents

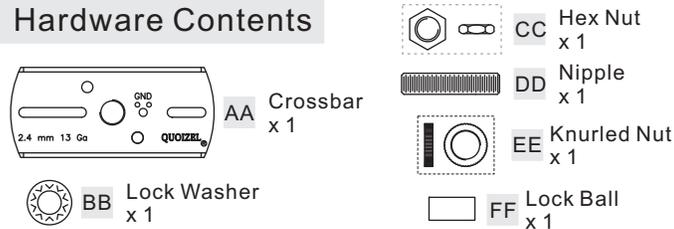


STEP 2 - Install the Crossbar to the junction box

A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included), tighten until snug.

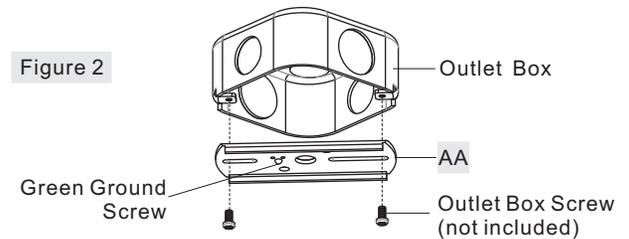

STEP 1 - Install Rods and Fixture Loop

A. Determine the Rods (C/D) to be assembled to the Fixture Body (F) according to your hanging height.

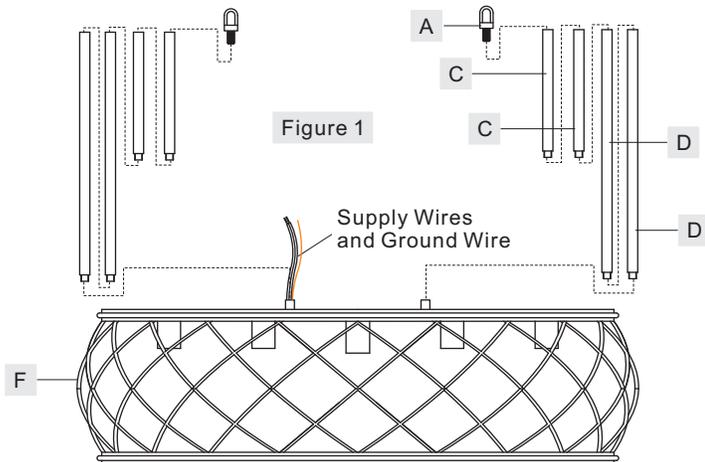


STEP 3 - Install the Nipple to the Crossbar

A. Thread one Hex Nut (CC) to the middle of the Nipple (DD). Place the Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the Crossbar (AA).

B. Place the Ceiling Canopy (E) over the Nipple (DD) against the ceiling to determine the correct position of the Nipple (DD). Thread the Lock Ball (FF) onto the Nipple (DD). Adjust the Nipple (DD) to allow the Ceiling Canopy (E) to rest against the ceiling when held in place by the Lock Ball (FF).

C. Remove the Ceiling Canopy (E) and then tighten the Hex Nut (CC) against the Crossbar (AA) to secure in place.

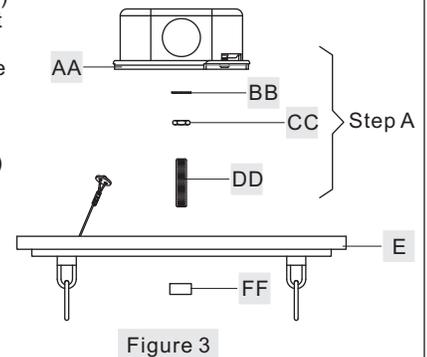

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com

STEP 4 - Connect Fixture Loops to Ceiling Canopy

A. Pass Supply Wires and Ground Wire through one Quick Link (B) and the lanyard side of the Ceiling Canopy (E). Connect the Fixture Loops (A) to single chains underside of the Ceiling Canopy (E) by using Quick Links (B).

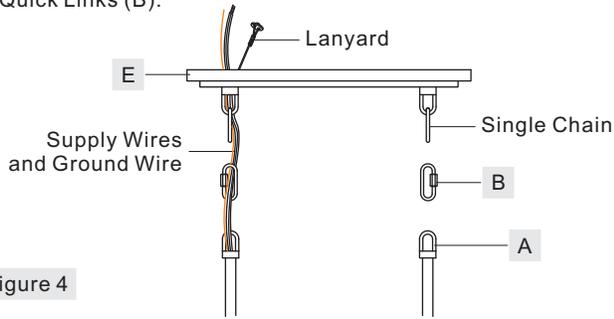


Figure 4

STEP 5 - Attach Lanyard

A. The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire connections.

B. Turn the Button Stop so it may be inserted into the Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop.

Proceed to the wiring steps in the next step. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.

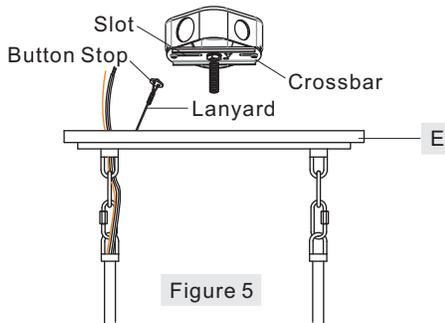


Figure 5

STEP 6 - Making the Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.

Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.

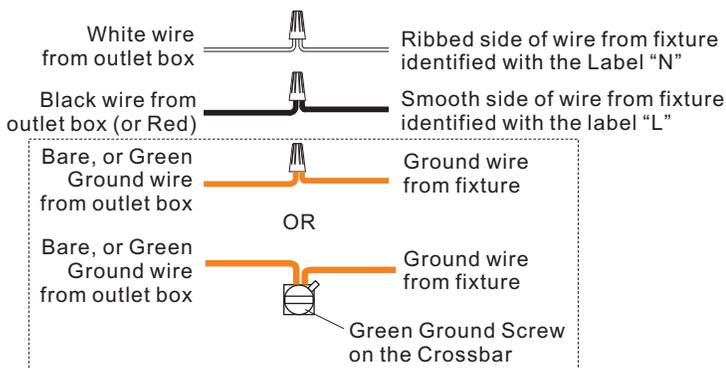


Figure 6

STEP 7 - Install Ceiling Canopy to Ceiling

A. Attach the Ceiling Canopy (E) over the end of the Nipple (DD) and secure with the Knurled Nut (EE). Hand tighten until snug.

B. Thread the Lock Ball (FF) onto the end of the Nipple (DD) and hand tighten until snug.

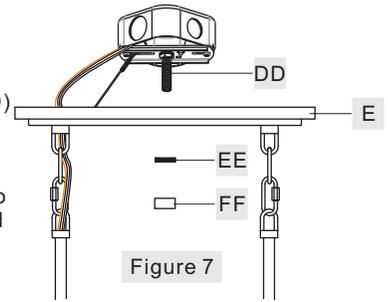


Figure 7

STEP 8 - Install Bulbs

A. Insert bulbs (G) onto sockets and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!



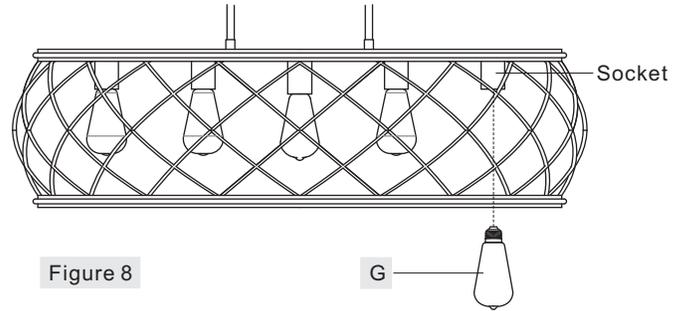


Figure 8

RDY538CS
FINISH: CENTURY SILVER LEAF

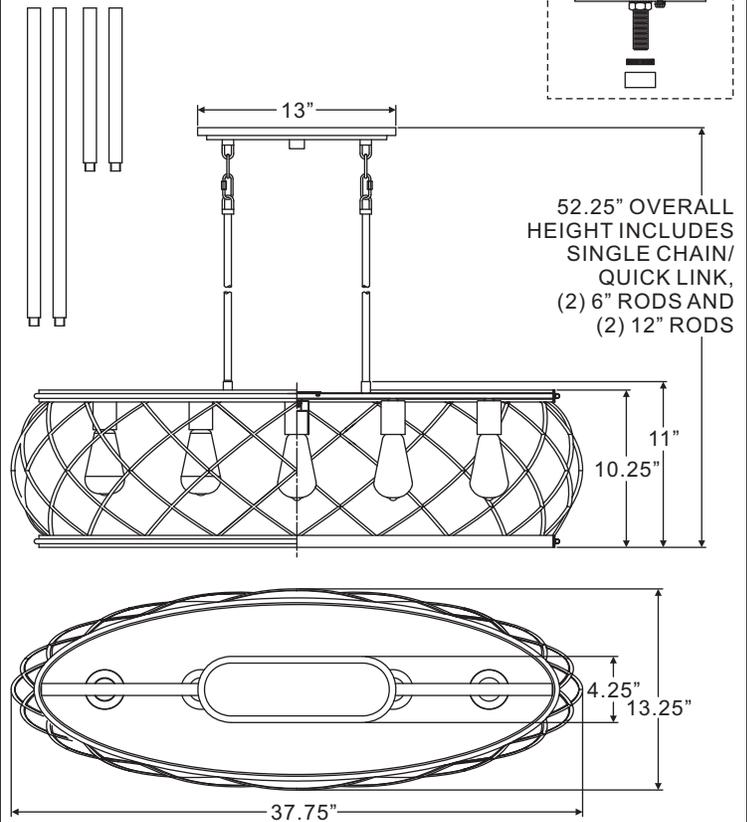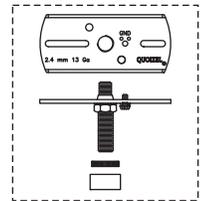

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoise.com